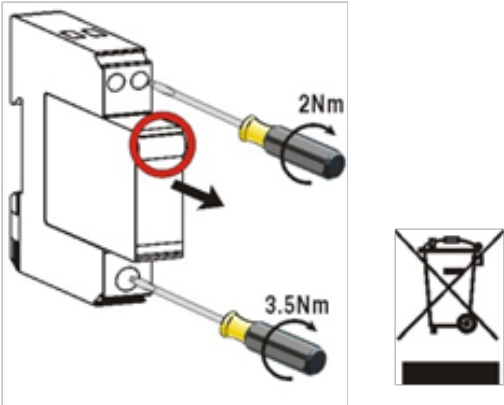
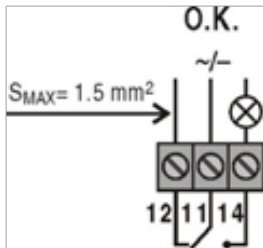
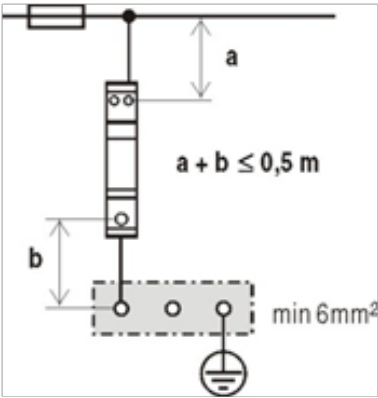


# INSTALLATIONSANVISNING / INSTALLATION INSTRUCTIONS

PDM(R)

<p>Larm / Remote signalisation indication</p>  <p>RÖD: byt stickdel / RED: Replace module</p>	<p>Larm/ Remote signalisation connection</p>  <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>A.C. 250 V / 0,5 A              D.C. 250 V / 0,1 A              125 V / 0,2 A              75 V / 0,5 A</p> </div>
<p>Installation/Installation</p> 	<p>Försäkring / Back-up fuse</p> <p>F1 &gt; 63 A gL      F2 = 63 A gL              F1 &lt; 63 A gL      F2 : inte installerad / not installed</p>

## Tekniska data / Technical data

<p>Uc (AC)              In (8/20µs)              I<sub>max</sub> (8/20µs)</p>	<p>320V              10kV/5kA              10kA/pole</p>	<p>440V              10kV/5kA              10kA/pole</p>
<p>Category</p> <p>Temperaturområde / Temperature range</p> <p>Anslutningsarea / Terminal cross section              upper terminal              lower terminal</p>	<p>EN 61643-11      Type 3              IEC 61643-1      Class III</p> <p>-40°C ... +80°C</p> <p>solid 6 mm<sup>2</sup> ; stranded 4 mm<sup>2</sup>              solid 35 mm<sup>2</sup> ; stranded 25 mm<sup>2</sup></p>	

## Montering

- Montering av överspänningsskydd måste utföras av kvalificerad personal.
- Överspänningsskydd måste installeras i enlighet med nationella bestämmelser och övervägande av skydd (IEC 60364-5-534).
- Överspänningsskydd kan skadas om de utsätts för elektrisk belastning som överstiger de värden som anges i tabellen.
- Obehörig användning av skyddet är inte tillåten och upphäver garantin.

Hantering efter utgång av den förväntade livslängden.

Produkten kan tas isär och plast- och metalldelar återvinns i enlighet med lokala föreskrifter.

## Mounting

- Mounting of overvoltage arresters must be carried out by qualified personnel only.
- Overtoltage arresters must be installed in compliance with national regulations and consideration of protection conditions (IEC 60364-5-534).
- Overtoltage arresters can be damaged if exposed to electrical loading which exceeds the values given in the table.
- Unauthorized intervention within the arrester is not permitted and invalidates the guarantee.

Handling after expiry of life expectancy

The product can be taken apart and the plastic and metal parts recycled in compliance with local regulations.

## Anslutning / SPD connections

